



1、 Remove the screws of the replacement sensor array as indicated in the figure below;

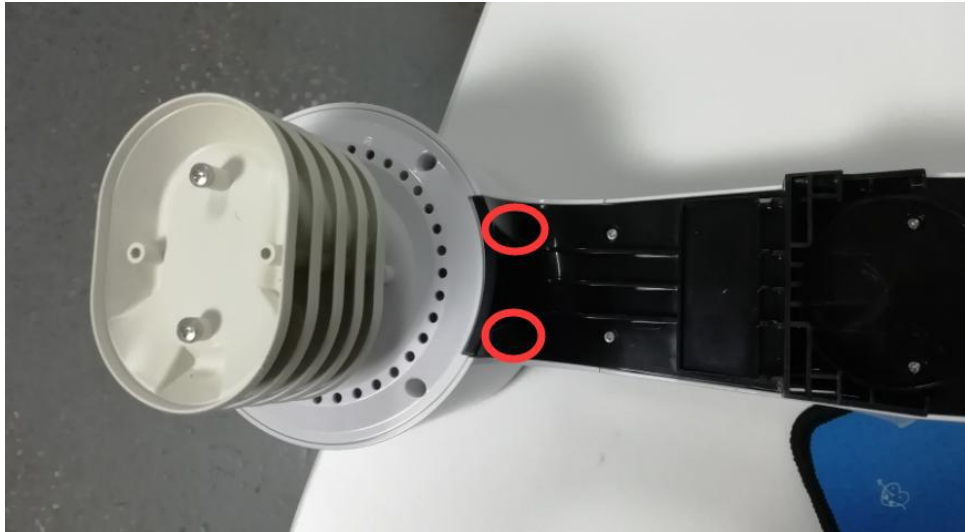

2、 Gently unplug the grey cable as indicated;

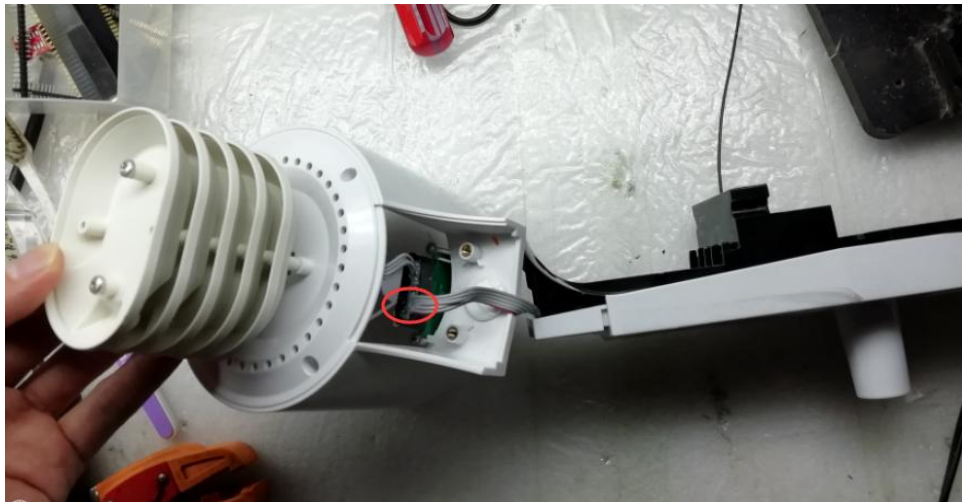

3、 Repeat the operation for the original sensor array and plug the grey cable into the replacement sensor array as indicated;



4、 Re-lock the rear shell.